


How to Assemble?

Under-Desk Cable Tray
powder-coated steel

1 Cable tray × 1

Size: W 24.0 × D 3.1 × H 5.2 in
(610 × 78 × 132 mm)



Fits under any desk top at least 18
mm thick.

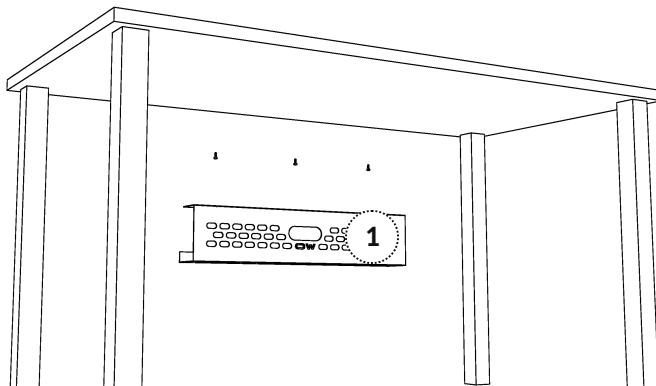



A screw 12 mm × 3

Tools: Phillips screwdriver, pencil

- 1** Hold the tray **1** up against the underside of the desk top where you want it. Mark the 3 screw points with a pencil through the round part of each keyhole.

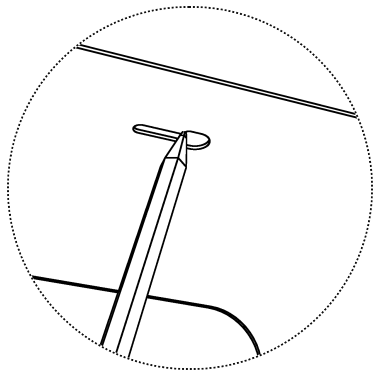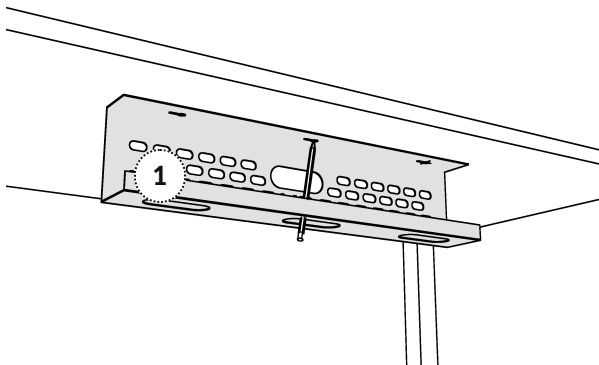


- 2** Remove the tray. Drive a screw **(A)** into each mark, clockwise, but only half-way: leave about 6 mm under each head.

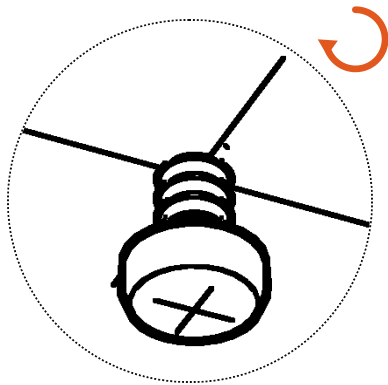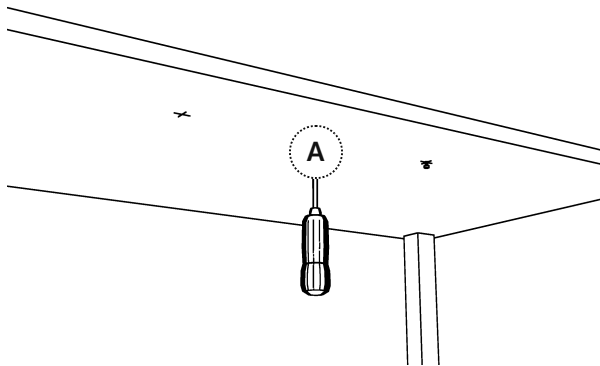


≈ 6 mm gap

- 3** Lift the tray so the 3 screw heads pass through the round holes.

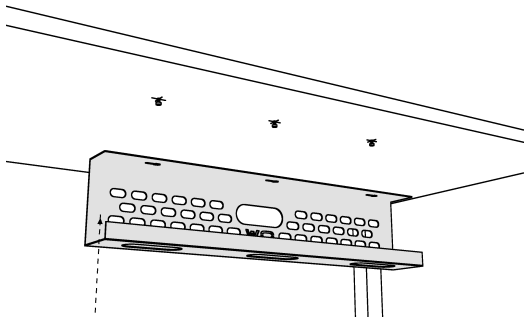


- 4** Slide the tray sideways so each screw moves into the narrow slot.

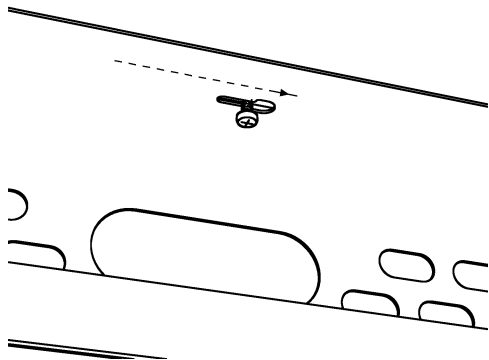

- 5** Tighten all 3 screws fully, clockwise. Do not over-tighten.



- ✓** Done! Route your cables through the tray.

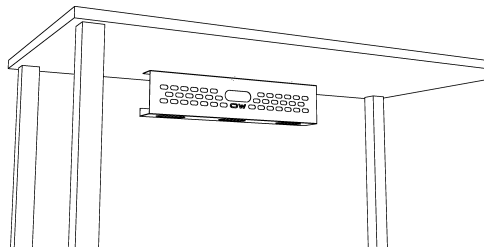

Safety Precautions!

- Use screws no longer than 12 mm so they do not come through the desk top.
- Check that the desk top is at least 18 mm thick.
- Do not overload the tray; it is for cables, adapters and power strips.
- Keep cables tidy and away from heat sources.
- Check the screws now and then and re-tighten if needed.

Support: support@openwood.pk

**OPEN
WOOD**

www.openwood.pk