

OPEN WOOD

How to Assemble?

Built-in Desk Lite 24 × 48 in

No screws • no tools needed



- ❶ Side (left) × 1
- ❷ Center piece × 1
- ❸ Side (right) × 1
- ❹ Top surface × 1

Assembled size:

W 47.5 × D 24 × H 29 in

(1206 × 610 × 738 mm)


The parts lock together with hooks and tabs. Two people make it easier.

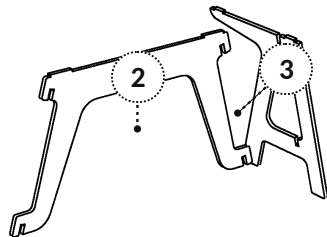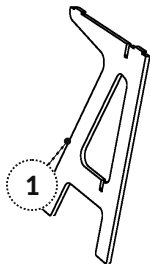


❷

❶


- 1** Stand side **1** on the floor (a helper can hold it). With the right end of center piece **2** slightly raised, lower its left end onto **1** so both hooks drop into the slots.

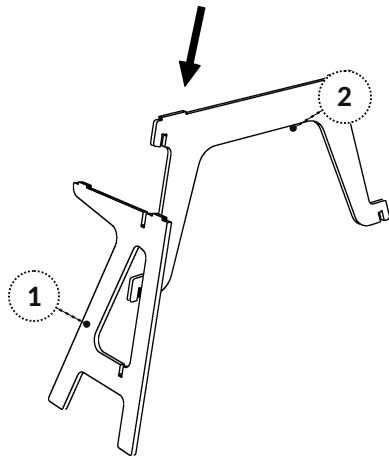



- 2** Stand side **3** under the raised end, leaning in at about 75°. Lower **2** until its hooks drop fully into **3**.

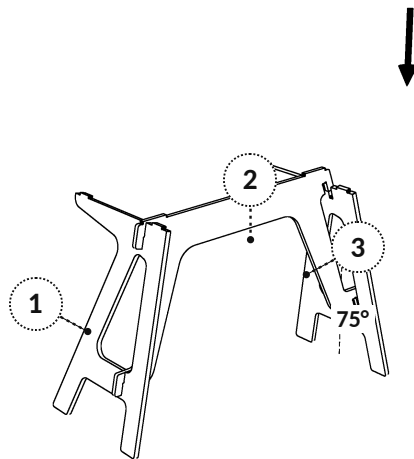

- 3** Lower top **4** (cable hole at the back) so the small tabs on **1**, **2** and **3** fit into the pockets under the top. Press down evenly.

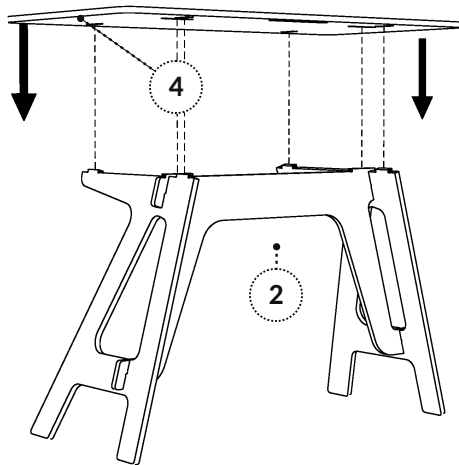

- ✓** Check every hook sits fully in its slot and the top lies flat on all tabs.

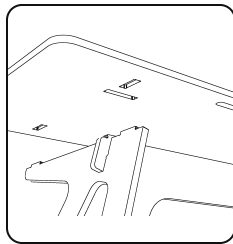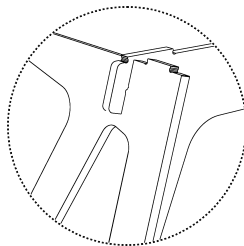

Left: hook of **2** in the side slot. Right: tabs fit the pockets under the top (only the cable hole goes through).



Safety Precautions!

- Apply cleaning liquid on the cloth, then gently clean the surface.
- Keep away from humid areas for a longer life of the product.
- Always place the product on a dry surface and avoid direct contact with water.
- Do not stand or sit on the desk.
- Place on a flat floor. Check all hooks and tabs are fully seated before use.

Moving or taking it apart

- Lift top ④ straight up off the tabs.
- Lift center piece ② straight up off the sides.
- Store the parts flat.

**OPEN
WOOD**