

OPEN WOOD

How to Assemble?

7-Tier Wall Shelf • 2 mm steel


- ❶ Shelf support (left + right) × 2
- ❷ Shelf tray × 3

Size: W 32.1 × D 6.4 × H 21.3 in

(816 × 162 × 536 mm)

7 tray levels, 73 mm apart

Two people make wall mounting easier.

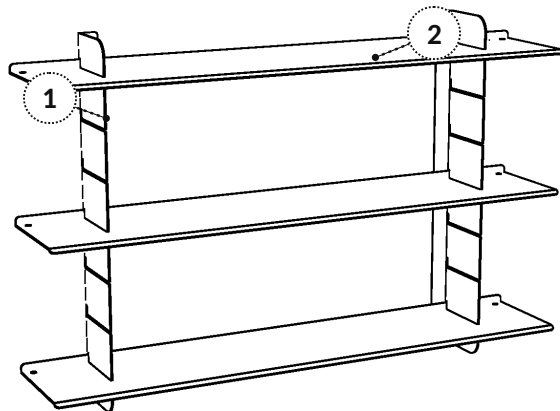



screw × 6




wall anchor × 6

Tools: drill with Ø6 mm bit,
Phillips screwdriver, spirit level,
pencil, tape measure


- 1** Hold support **1** flat on the wall and check it is plumb with a spirit level. Mark its 3 screw holes with a pencil. Mark the second support 610 mm (24 in) away, holes at the same height.

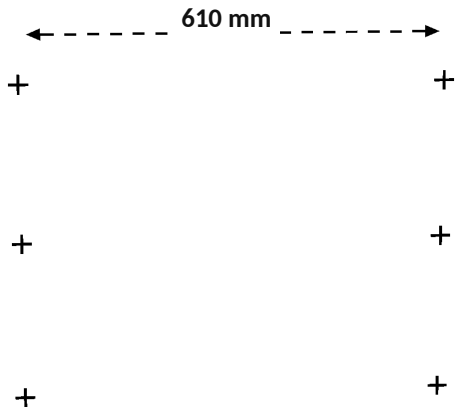

2 Drill a Ø6 mm hole, 35 mm deep at each mark.


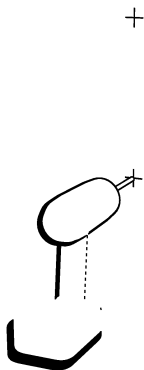


3 Push a wall anchor (B) into each hole and tap it flush with a hammer.

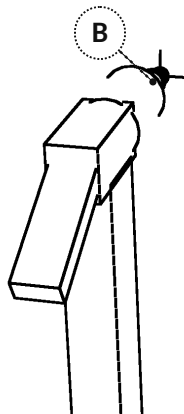



Check for hidden pipes and cables first. The anchors suit brick and concrete; for plasterboard use hollow-wall fixings.

- 4** Hold support **1** over the anchors and drive 3 screws **A** through its flange with a Phillips screwdriver, clockwise until snug. Fix the other support the same way.

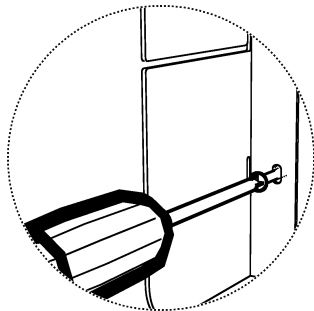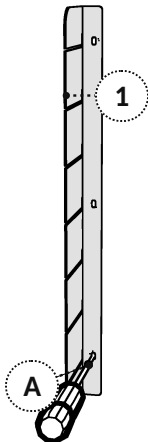

The slotted holes let you fine-tune the height before you tighten.


- 5 Slide each tray 2 in from the side, through the slots of both supports. The flat part runs in the slot and the back lip runs up in the hook. Centre the tray.

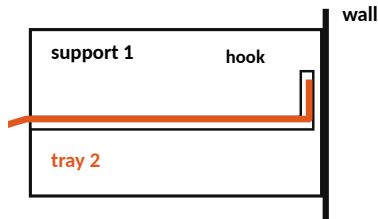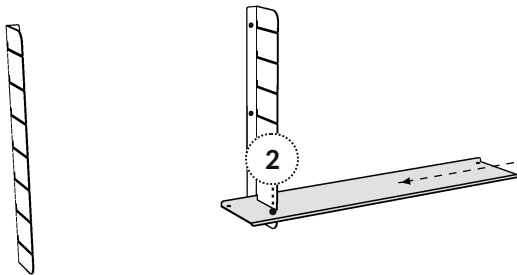

Section: the back lip in the hook stops the tray tipping forward.



Done! Trays fit any of the 7 levels. Slide them out and back in to rearrange.

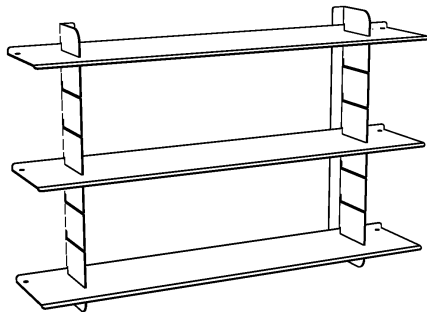

Safety Precautions!

- Check for hidden pipes and cables before drilling.
- Use fixings that suit your wall.
- Spread weight evenly; heavy items on the lower trays.
- Do not climb on or hang from the shelf.
- Keep away from water to protect the finish.

Support: support@openwood.pk

**OPEN
WOOD**

www.openwood.pk